

---

### Seat Height

Tab next to tilt tension knob, lower right



**To raise:** While taking your weight off chair, lift tab up.

**To lower:** While seated, lift tab up.

---

### Harmonic™ Tilt Tension

Knob below right front side of seat



**To increase:** Turn knob clockwise.

 
**To decrease:** Turn knob counterclockwise.

---

Adjust chair height so your feet rest flat on floor or footrest, with your body comfortably supported by breathable AireWeave™ suspension. Avoid dangling legs, which puts pressure on the back of thighs and restricts blood flow. A work surface or keyboard that seems too high or low may require adjusting.

---

Increased tilt tension provides more stability and back support while you recline.

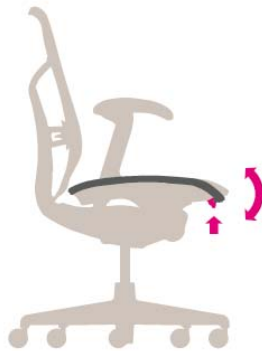

---


**FlexFront™ Seat Depth**

 *Handle under front of seat*

Squeeze handle and adjust seat edge up or down. Release handle to lock in position.

---

For maximum back support, adjust chair depth (distance from hip to knee) so the seat edge doesn't hit the back of your legs.

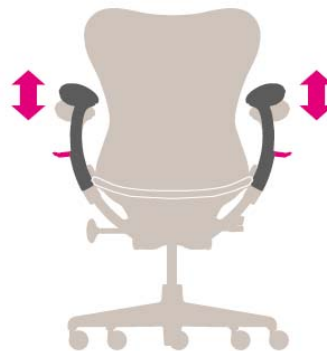

---


**Arm Height**

 *Tab on outside lower base of each arm*

**To raise or lower arms:** Raise tab to unlock arm, adjust arm, lower tab to lock.

---

Adjust height of each chair arm so your arms are supported. This helps take weight off your shoulders.

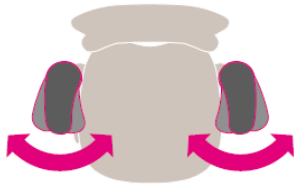

---


#### **Arm Angle**

 *Front of each armpad*

**To pivot arms in or out:** Grasp front end of armpad and pivot it to the left or right.

---

Adjusting arm angle can help support different types of work and shifts in posture. For example, adjust chair arms inward for support while using keyboard; adjust arm out for support when using mouse.

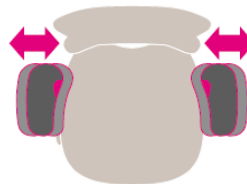

---


#### **Arm Width**

 *Button on inside of each armpad*

**To adjust:** Engage button and adjust arm in or out.

---

Adjust width of each chair arm so your arms are supported. This helps take weight off your shoulders.

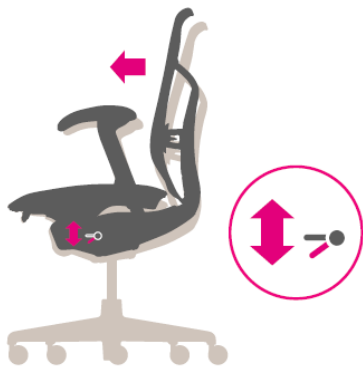

#### **Forward Tilt**

*Horizontal tab on left front side of seat*



**To position chair forward:** Recline and flip lever down.

**To resume horizontal position:** Recline and flip lever up.

#### **Tilt Limiter**

*Vertical tab on left front side of seat*

 


**To engage:** Recline and move lever up to define the limit of recline.

**To release:** Lean forward and press lever back.

Forward tilt with a 4-degree range provides full support while leaning forward for task-intensive work, such as keyboarding. Normally, forward tilt position is used with increased chair height. This position helps the body achieve a more neutral, open angle between trunk and thighs.

If you want to sit in an upright position, set the tilt limiter when the seat is in a horizontal or forward position.

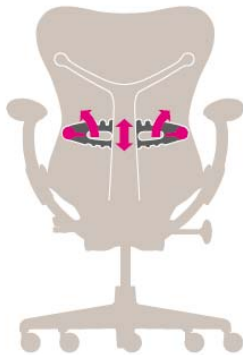


---

### **Lumbar Height**

 *Levers on lumbar support*

***To raise or lower:*** Move levers up to loosen, slide lumbar support up or down to desired height.

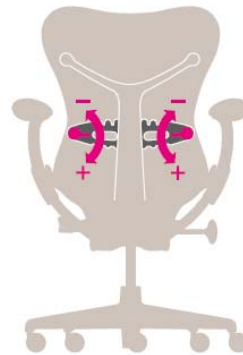

---

### **Lumbar Depth**

*Levers on lumbar support*

***To increase lumbar support:*** Adjust levers downward.  
***To decrease lumbar support:*** Raise levers upward.

---

Although the chair back automatically adjusts to your size and posture, you can fine-tune lumbar support by adjusting the bar so that it comfortably supports the natural curve of your spine. Once support is adjusted, it follows you throughout your range of recline.