



630 + 4620
+ optional polished base



620 + 4620
Multi adjustable armrest
and optional polished base



615 + optional polished base

European Standard EN:1335:2000 -1-2-3 (Cat A) certified for 'Dimension', 'Safety' and 'Strength & Durability'.

Fully independent Dynamic seat and back.

As health and safety aspects at work become more prominent it is known that many staff fail to adjust their chair correctly.

These chairs are aimed specifically at helping these staff protect themselves from future back problems.

By offering very stable constant movement of the seat tilt it helps prevent the user from repetitively posturing badly, especially while they work forward at their desk.

When the user rests back the seat and back will automatically cradle and support their posture allowing a very relaxed position.

* To accommodate an even wider range of people size a short seat 630/620/615 is available See over page for details *



Optional pump up
twin lumbar
support + £48 @ 1/1/06
(not shown in price book)



Seated Depth Adjustment +/-50mm



Standard Black Nylon Base



Optional Extra: Polished Base



Active Comfort ©
Active Dynamic ©



Setting up your Vision 600 series chair

1 - Set the gas height - try to have it set slightly high rather than too low.

2 - Turn this lever to lock the back rest upright. It is recommended that the back rest is not locked for long periods. The seat tilt cannot be locked in order that your posture is helped to retain an 'S' shape when working forward at your desk.

3 - Sit forward on the seat to adjust the tilt balance lever - If you move the lever forward it will take more pressure to tilt the seat. This lever adjustment is noticeable to users of 60kg or less in order that the seat tilts easier so if you are small or light then you will most likely prefer the lever set full back.

You cannot adjust this part unless you sit at the front of the seat whilst you move the lever.

4 - Loosen this knob to slide the back rest horizontally in order to increase or decrease the seated depth +/-50mm. Ideally you should sit with a 30-50mm gap between the front of the seat and the back of your knees. Tighten the knob again before using the chair.





5 - Loosen this knob to slide the back rest vertically in order to position the lumbar area correctly for when you rest back. Preferably do this wearing a thin top rather than a jacket so that you can feel the back pad. Set it so that the most pronounced area goes into the small of your back. Tighten the knob again before using the chair.

If your chair is fitted with the optional lumbar pump then inflate this using the hand pump until it feels most comfortable

6 - Now that the chair is set for your size and shape turn this knob + or - to increase or decrease the tension on the back tilt. Most people will find that a full - minus position is comfortable and this is the setting that will encourage the most body movement.

**7 - Optional (extra cost) - Multi-adjustable armrests 4620
Multi adjustable armrests adjusts forwards, backwards, up, down & 'click' rotates left or right. Also width adjustable.**

For medical suitability for an existing condition always consult a medically qualified practitioner
Recommended maximum user weight 120 kg
5 Year Guarantee in normal office use (see price book) For 24 hour use or multi shift use please ask for details as we have other models suitable for 24 hour use.

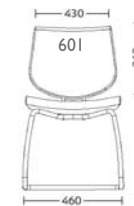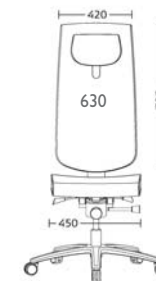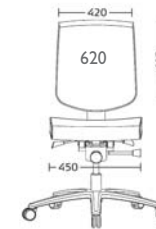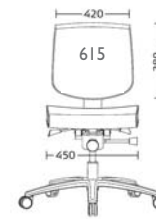

Seat pad 60mm
Back pad 40mm
Castors 65mm Diameter
Seat height * 445-585mm
*(other height options available)

European Standard
EN:1335:2000
1-2-3 (Cat A)
Certified for 'Dimension'
'Safety' 'Strength & Durability'.

Dynamic - Active Comfort®

Our bodies and moving parts such as muscles and joints are at risk of injury when we move after having been still for any length of time.

The nature of the office workplace today is that more and more tasks can be completed without leaving your seat.

The Vision 600 series is designed to encourage movement whilst seated and to ensure that the seat angle automatically helps retain the natural 'S' shape of the spine when the user works or leans forward at their desk

Fully independent dynamic seat and back

EN1135 2000 Dimensional requirements and adjustments are designed to accommodate 90% of European users with regards size and stature, 600 series has an optional short seat version available on 615,620,630 in order to help accommodate an even wider range of user.



The short seat version is 4cm less at 40.5cm seat pad depth. Seat depth adjustment to the back pad is +/-50mm as per the standard chair.



Vision Inspired Business Interiors Ltd.
Unit A, Walkers Yard, Thame Road,
Longwick, Princes Risborough,
Buckinghamshire, HP27 9SG

Tel: 01844 346503 Fax: 01844 346516
email: mark@visioninspired.com
www.visioninspired.com