



Vision Inspired Business Interiors Ltd.

800 series

www.visioninspired.com



830 & 870



820 & 860



815 & 855



Active Multi Choice®
With either Spring or Gas controlled chassis - see over for details

European Standard EN:1335:2000 -1-2-3 (CAT. A) certified for 'Dimension', 'Safety' and 'Strength & Durability'. (copy available on request)

800 series - Developed in conjunction with a top Danish Backcare Physiotherapist

Fully independent seat and back adjustments - see over page for full details


As health and safety aspects at work become more prominent many companies and public bodies have these chairs as standard.

From 'air traffic control' to 'senior directors' to 'data entry staff' to 'Emergency services control officers'

Successfully used by individuals to aid existing back conditions - Aimed at helping staff protect themselves against future back problems



Optional lumbar pump adjuster

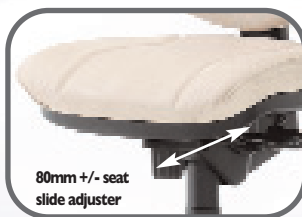

80mm +/- seat slide adjuster




830/870 Height and rake adjustable headrest



Standard: Black coated Aluminium Base




Optional:
1) Polished Aluminium base
2) Polished base with caps

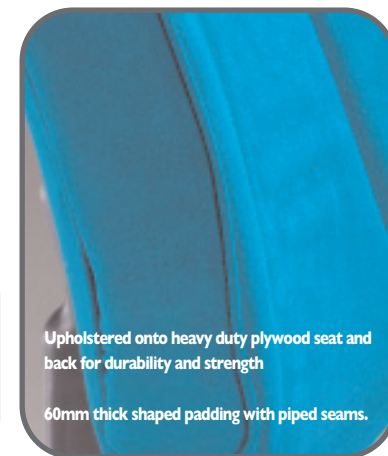


Upholstered onto heavy duty plywood seat and back for durability and strength

60mm thick shaped padding with piped seams.


815 and 855

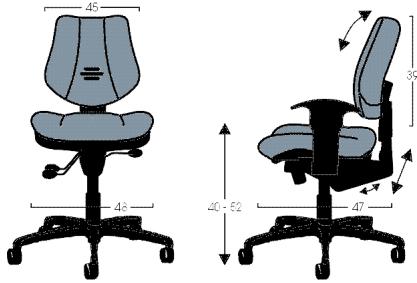


820 and 860

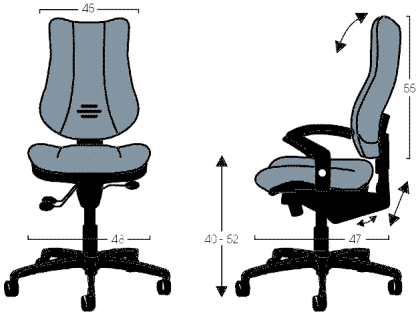


830 and 870

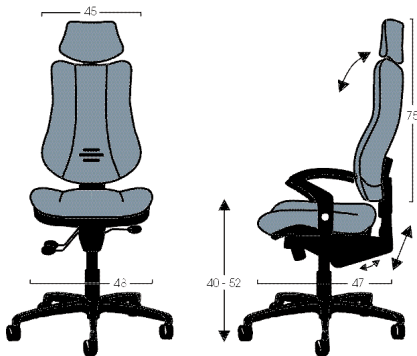

Visitors chairs
Please ask for options

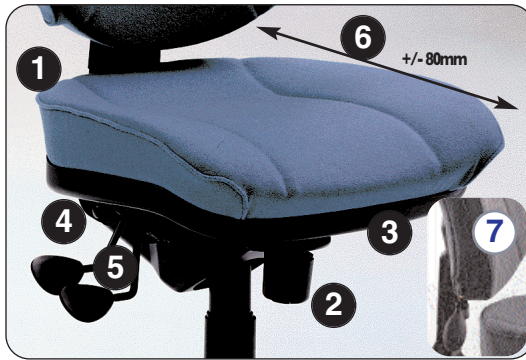

815 - 820 - 830 Active Multi Choice ©
Spring controlled system
perfectly balanced and easy to adjust

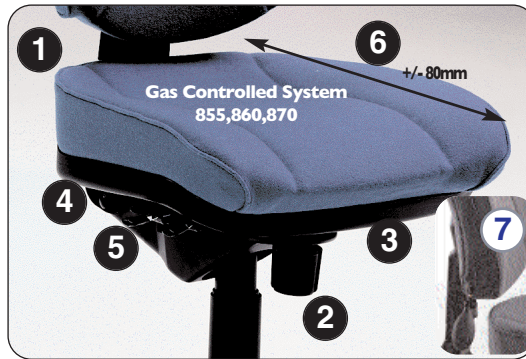

855 - 860 - 870 Active Multi Choice ©
Gas controlled seat and back system
the ultimate feel, ease of adjustment
an exceptional free-float dynamic system

European Standard
EN:1335:2000 (cat A)
1-2-3
Certified for 'Dimension'
'Safety' 'Strength &
Durability'.

Optional armrests (extra cost)



4830
Multi
adjust

4830 adjusts
forwards
backwards
up, down
& 'click'
rotates
left and right.



4801
Height
&
width
adjust



4851
Height
&
width
adjust

- 1 - Lever to adjust back / lumbar height
 - 2 - Tension adjustment knob to adjust seat and back float pressure according to the user's weight
 - 3 - Gas lift (lever on left side) adjusts seat height between approximately 40cm and 52.5cm
 - 4 - Lever to release **Spring or Gas controlled** back float, this can be independently locked in any position
 - 5 - Lever to release **Spring or Gas controlled** seat float/tilt, this can be independently locked in any position
 - 6 - Twist handle to release and lock seat depth adjustment +/- 80mm
 - 7 - **Optional (extra cost) - pump up lumbar support, inflate as required to increase lumbar curve**
- Seat tilt + 6 degrees to -10 degrees
Back tilt + 8 degrees to - 8 degrees
60mm thick padding upholstered front and back with piped seams
Recommended maximum user weight 120 kg
5 Year Guarantee in normal office use (see price book) For 24 hour use or multi shift use please ask for details

Setting up your Vision 800 series office chair

The seat and back are **fully independent**, ie.. they operate separately which is the system preferred and recommended by most back care specialists.

These chairs can be used locked or set in free-float, you can lock just the back or just the seat or both at any point in the movement. The Gas controlled 855,860,870 feels exceptionally steady/secure if you intend to use your chair often set in free-float or rocking mode and the finger tip control levers make adjustment quick, easy and almost effortless.

Adjust to your size

First set the seat height to where you feel comfortable using large paddle lever '3' (this is on the left as you sit). try to have it set slightly high rather than too low. High and low gas stem options are also available, please ask your dealer.

Then set the seat depth using handle '6' - twist the handle forwards in order to release the lock, now you can slide forward or back, when you twist the handle backwards again the slide will lock. Always make sure your seat is flat while you do this as if tilted you will not be able to slide your body weight uphill.

Then Please make sure that you adjust knob '2' to suit your weight, you should be able to have the seat tilt lever released and sit upright with your hands hanging down without the chair tilting you forwards or backwards, this way you know that it is set correctly. When you think it is set correctly sit upright and lift your feet slightly from the floor - if you feel balanced slowly bring your arms forwards and then backwards. You should then slowly tilt forwards and backwards on the chair with no sudden movement.

Adjust for your lumbar support

Flip open lever '1' (this is on the right behind you as you sit) then move the back rest up or down in order to position the lumbar support where you find it comfortable. Then reclamp lever '1'. Note - lever 1 is adjustable, if the back is hard to move then unwind lever 1 slightly, if it does not lock the back height securely then flip open the lever and wind it in a few turns clockwise, then clamp it closed again.

If your chair is fitted with the optional pump then squeeze the pump '7' and set the lumbar bulge to your preferred size

Your seating comfort and back care

Use levers '5' and '4' to adjust the seat and back angle respectively. To reduce stress on the lower back it is generally advised that people have their seat tilted forward whilst working forward at your desk. This helps retain the desired 'S' shape of your spine naturally.

It is recommended that you try not to sit for long periods in the same position - try to stand up several times each hour and take the opportunity to relax back in your chair when taking a phone call in order to vary your seating position. Full advice on back care should be taken from a qualified medical practitioner.



Vision Inspired Business Interiors Ltd.
Unit A, Walkers Yard, Thame Road,
Longwick, Princes Risborough,
Buckinghamshire, HP27 9SG

Tel: 01844 346503 Fax: 01844 346516
email: mark@visioninspired.com
www.visioninspired.com